

BASKETBALL MARQUEE **PROGRAMMING**

To enter the programming mode for the basketball marquee, press and hold the game's "START" button on the game control panel. While holding the START button, press the "PROGRAM" button located inside the coin door. You are now in the marquee into programming mode.

Pressing the "PLAYER/SELECT" button on the control panel will advance the setting of each mode.

Each simultaneous push of the "START" button will change the mode.

1. "VOL" = VOLUME
2. "SCR" = SCORE (to win jackpot) *
3. "JCK" = JACKPOT (ticket award)
4. N/A
5. "CAP" = JACKPOT CAP (max tickets awarded)
6. "DEC" = GAME DECREMENT (auto adjust)
7. "HLD" = HOLD JACKPOT (saves value)

***If JACKPOT is set to zero, marquee will award Free Game**

Press "PROGRAM" button to save and exit marquee programming.