

Error Codes for Down Da Clown

Error 1 Ticket Error

Solution:

Refill Tickets!

Error 2 CF Error ; Compact flash error

Solution:

Reseat Flash card or replace.

Error 3 Ball Gate Error

Solution:

Check for proper ball gate operation. See section "Ball Gate Assembly"

Error 4 Top Motor/Switch Error ; Top Row switch not seen.

Solution:

Check Clown Reset Bracket sensor. See section "Clown Reset Bracket Sensor"

Error 5 Middle Motor/Switch Error ; Middle Row switch not seen.

Solution:

Check Clown Reset Bracket sensor. See section "Clown Reset Bracket Sensor"

Error 6 Bottom Motor/Switch Error ; Bottom Row switch not seen.

Solution:

Check Clown Reset Bracket sensor. See section "Clown Reset Bracket Sensor"

To enter Error display mode, please press the UP push button located on the lower center door when in attract. To exit this mode, repress the UP push button .