



## Media Player Assembly—SH2015

1. Flash Card
2. Audio output jack (do not confuse with video connection, issue may occur)
3. Video output jack (do not confuse with video connection, issue may occur)
4. Power connection
5. Communication port to Black Box
6. IR receiver (for remote that comes with Media Player kit)

The Media Player is adjusted in the factory prior to shipping the Media Player Kit. If at any time the setting change in the Media Player, there a few simple options that need to be changed to get it to work in the Kiddie Coaster.

1. With Communications cable disconnected from media Player, Start up Coaster.
2. After you hear “ding” at start up, press setup button on remote control.
3. Go to “preferences” —> “Setup Values” —> and select “Default”.
4. After you select “default” select “main Page”.
5. Next go to “Advanced Setup” —> “Playing Mode” —> “Standby”
6. After you select “Standby” select “main page” and then select “exit setup”

The remote control is/can be used to adjust the volume of the game. While game is playing you can use the up/down volume buttons on remote to adjust the output volume of the game. You can also still use the TV volume adjustments too.