

# ERROR Codes

Error #	Description
1	Bad or missing Compact Flash Card (Occurs on power up)
2	Zero Count Sensor Error - Check for Balls in Sensor (Occurs only on power up)
3	Sensor 1K (Occurs only on power up)
4	Sensor 2K (Occurs only on power up)
5	Sensor 3K (Occurs only on power up)
6	Sensor 4K (Occurs only on power up)
7	Sensor Left 10K (Occurs only on power up)
8	Sensor Right 10K (Occurs only on power up)
9	Ball Count Sensor Error (Occurs only on power up)
10	Coin 1 Stuck Down (when does it occur)
11	Ticket Error
12	Solenoid Seat Sensor (Occurs only on power up)
FULL	The solenoid will not activate if the zero count sensor is blocked. (Occurs anytime)
SOL	The solenoid is activated but has not reached its end of travel. (Occurs during game play)
TIC	Game owes tickets and is out of tickets. (Occurs during game play)