


How to reset the daughter board on Super Chexx

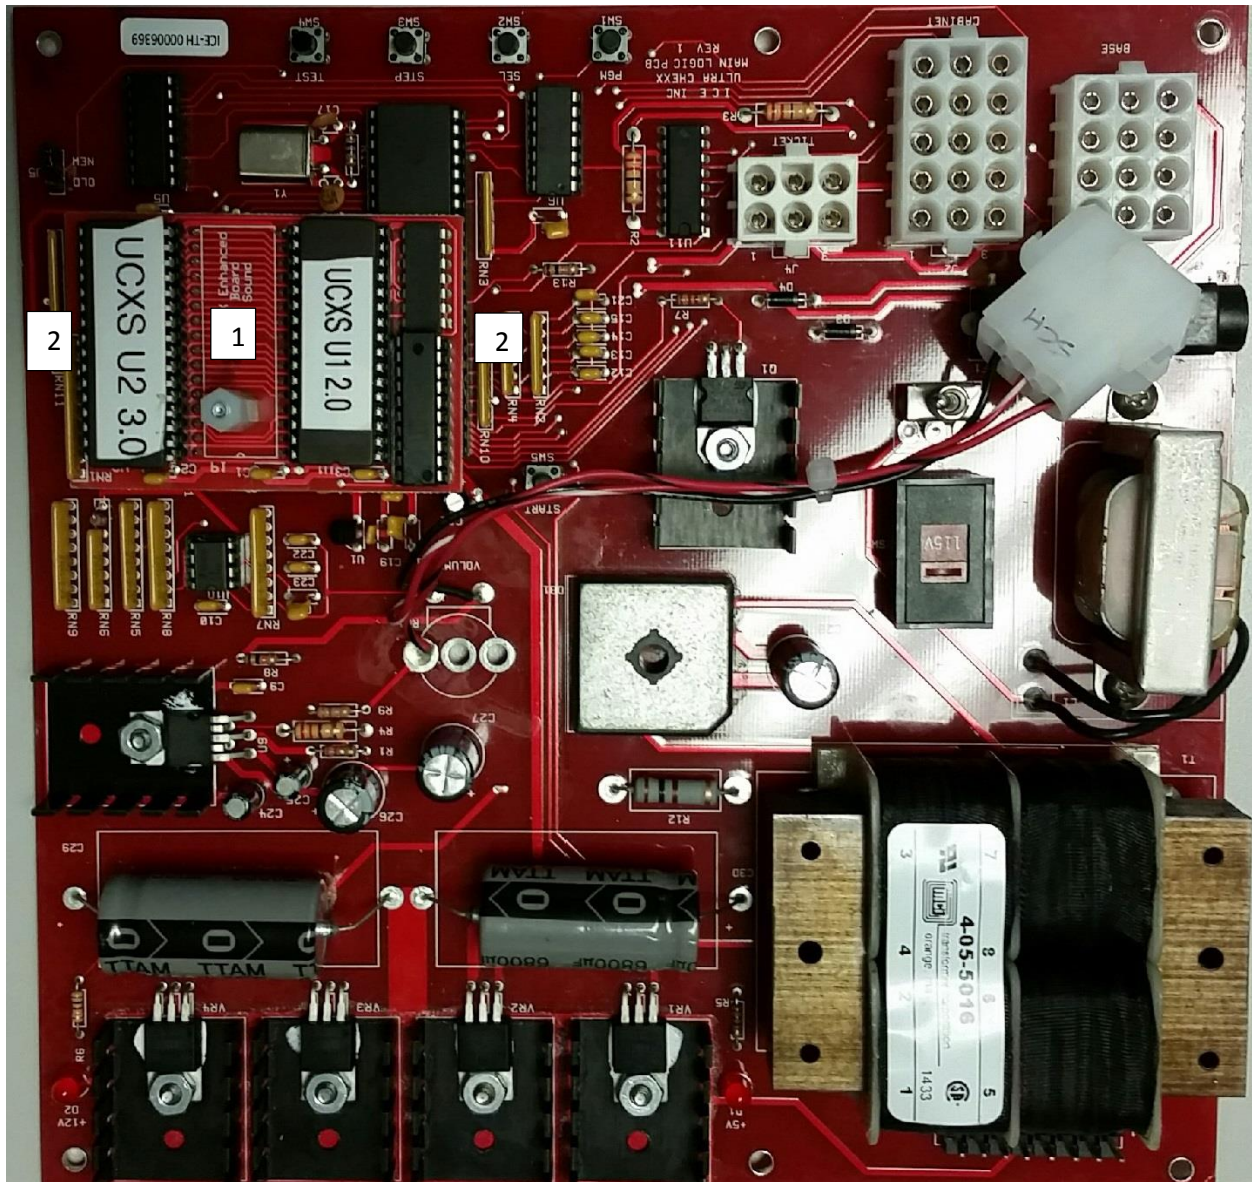

Step 1: Turn power to the game off

Step 2: Access the main board

Step 3: Remove the white nylon standoff (number 1)

Step 4: Grasp the edges of the daughter board (number 2) and gently pull straight up

Step 5: Check the pins on the bottom of the daughter board for signs of damage

Step 6: Re align the pins on the daughter board with the socket on the main board and firmly press into place.

Step 7: Replace the white nylon nut removed in step 3, and reassemble the game.

