


INSTRUCTIONS TO REPLACE SUPERCHEXX SCOREBOARD

EVERYTHING REQUIRED IS INCLUDED IN THE HARDWARE PACKAGE LOCATED IN THE LOWER DOOR CASHBOX OF EVERY UNIT


- 5/32" Allen wrench
- 3/16" Allen wrench
- S-hook cable wire

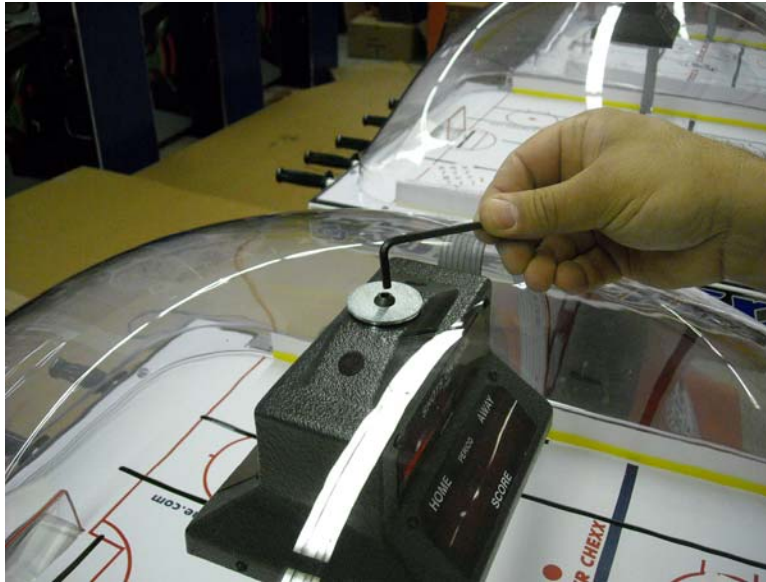

Use the 5/32" Allen wrench to loosen the bolt that fastens scoreboard to dome.




Use the larger 3/16" Allen wrench to remove the 10 bolts that fasten the dome.

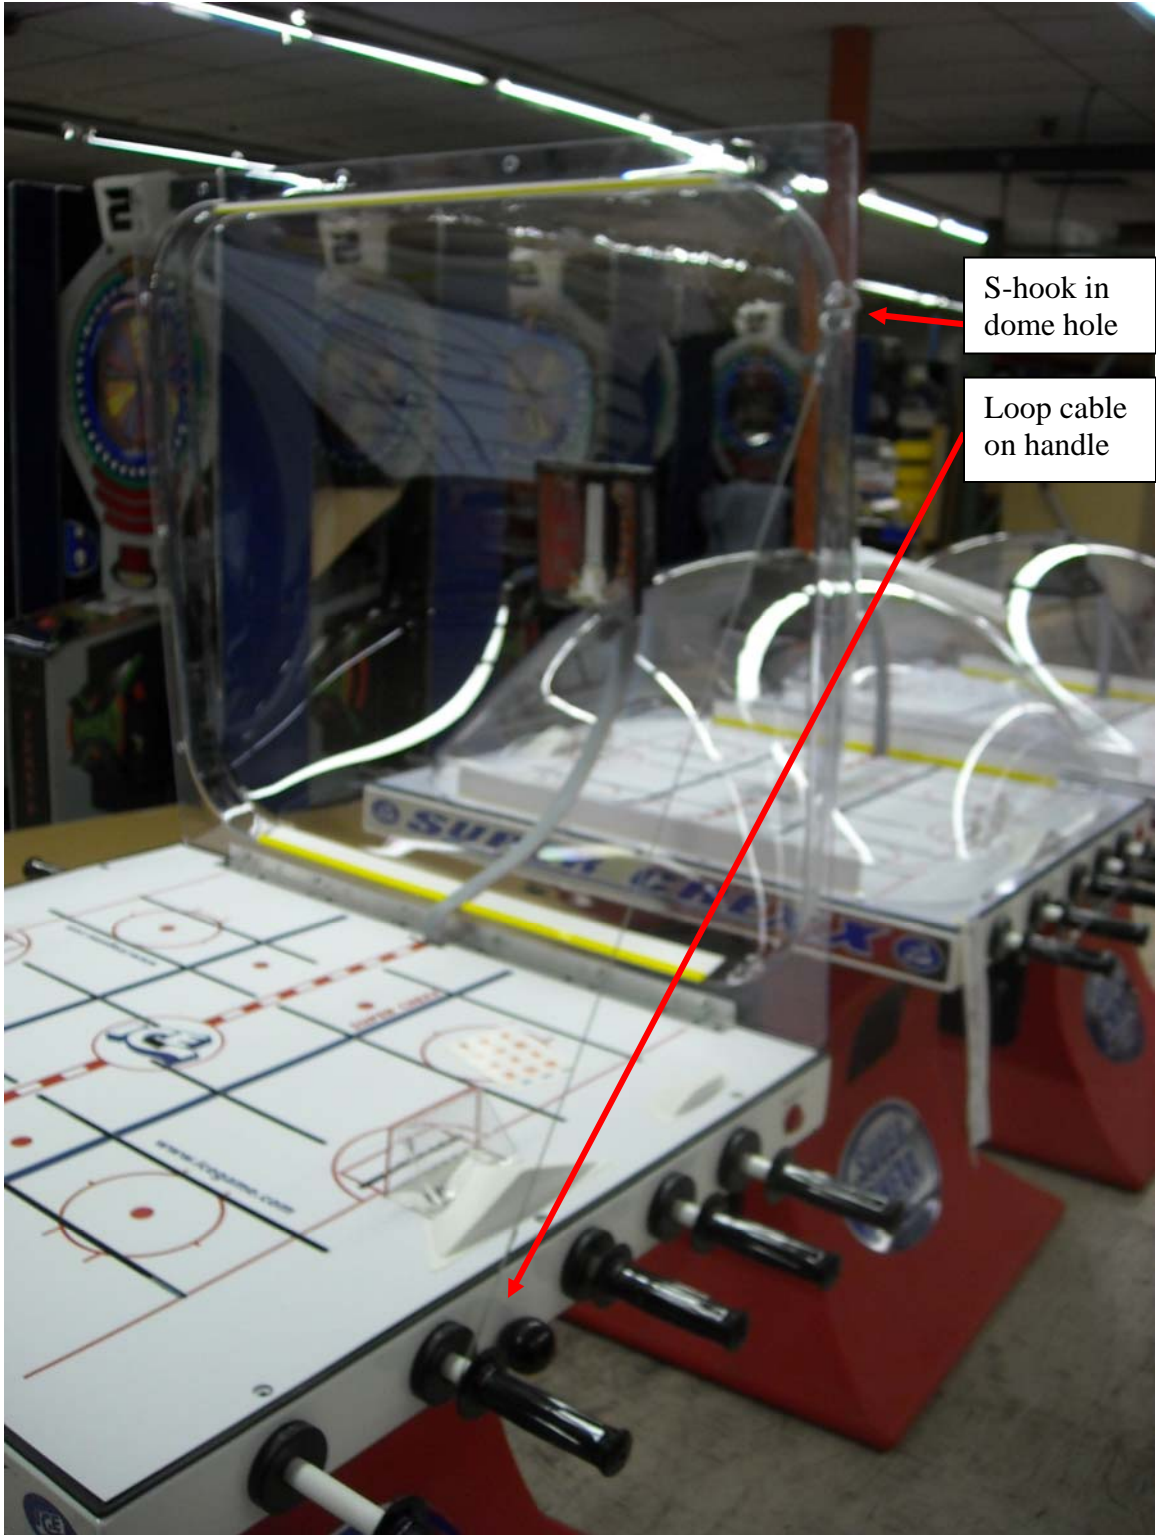

Hinge the dome back and use the S- Hook to stabilize the dome.



Finish unfastening the scoreboard and remove the assembly by disconnecting the ribbon cable. Be careful not to pull on the ribbon as it is adhered to the dome.

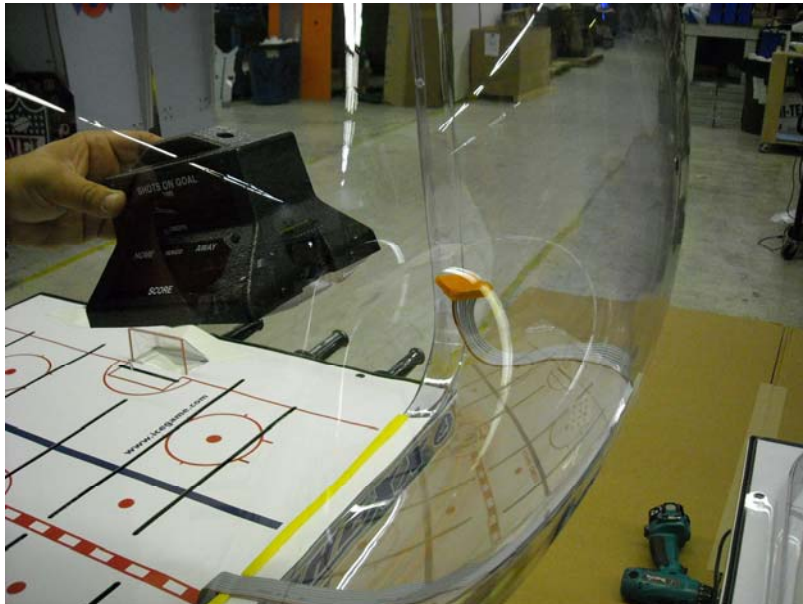

Replace scoreboard and reassemble in reverse order.

**Please call the ICE service department with any questions that you may have. ICE Service
Dept # (716) 759-0360.**

Thank you for supporting ICE products.

