


SLIDE INNER CLAMP BETWEEN CABINET AND CAGE.

OUTTER CLAMP


LOOSELY SCREW TOGETHER OUTTER AND INNER CLAMPS TO THE CAGE.

STEP ONE

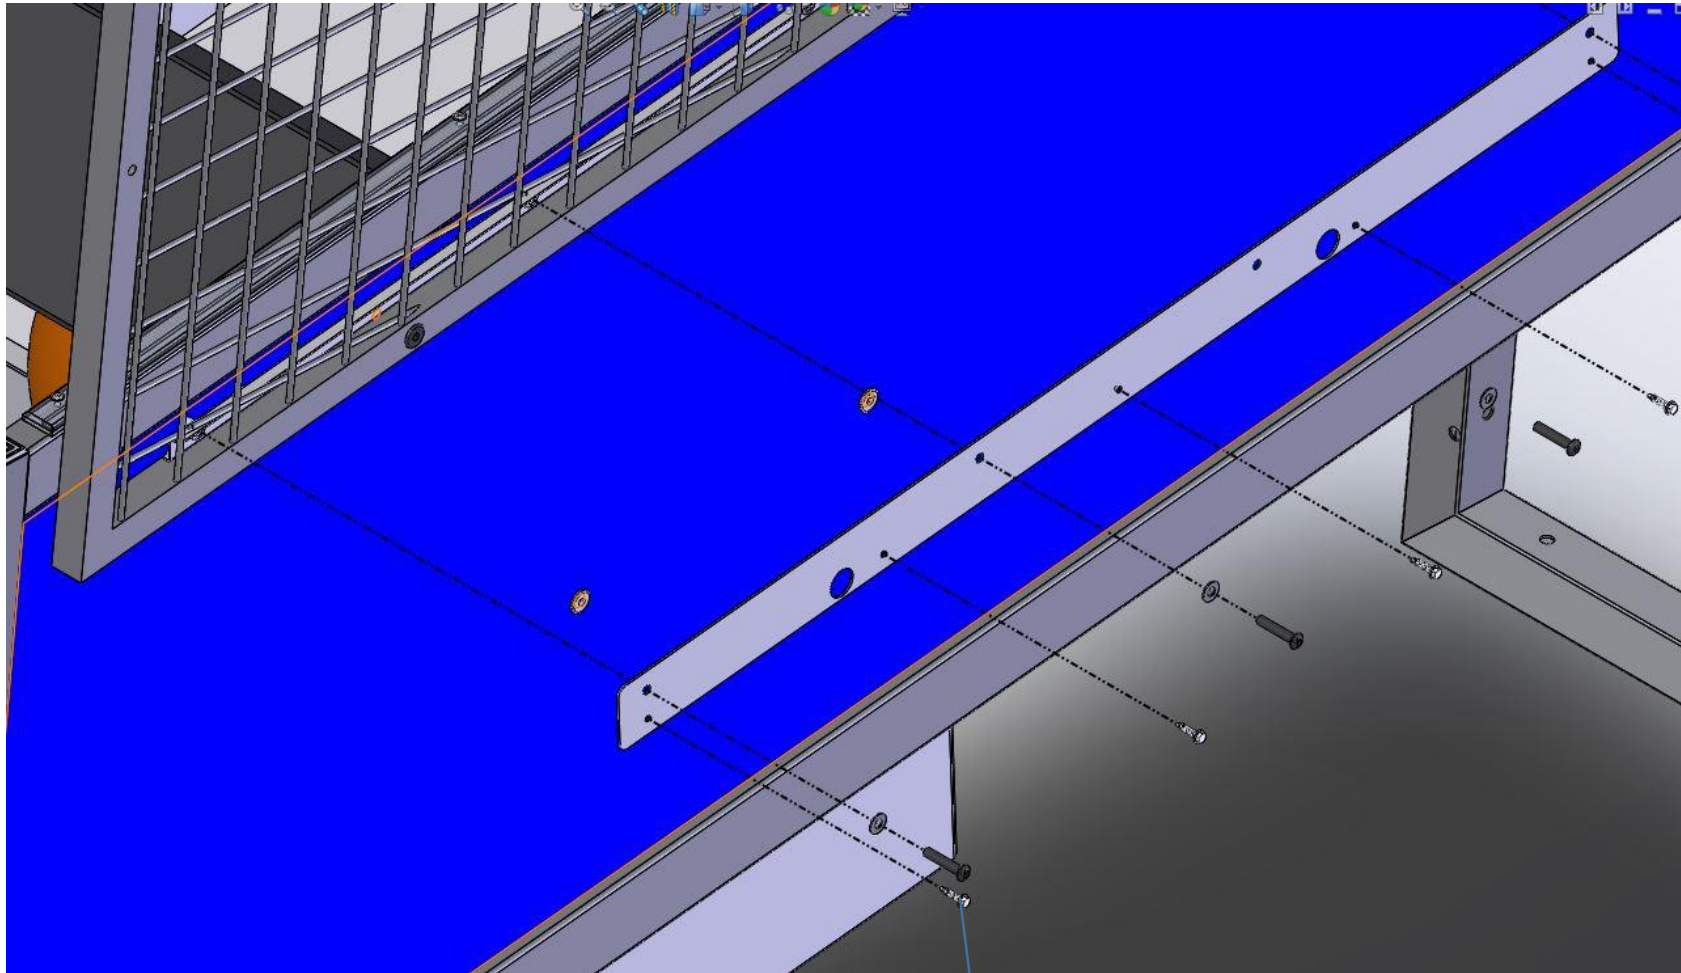


AFTER OUTER AND INNER CLAMPS ARE LOOSELY IN PLACE FASTEN THE OUTER CLAMP TO THE CAGE RAIL WITH #8 HEX TEK SCREWS.

STEP TWO

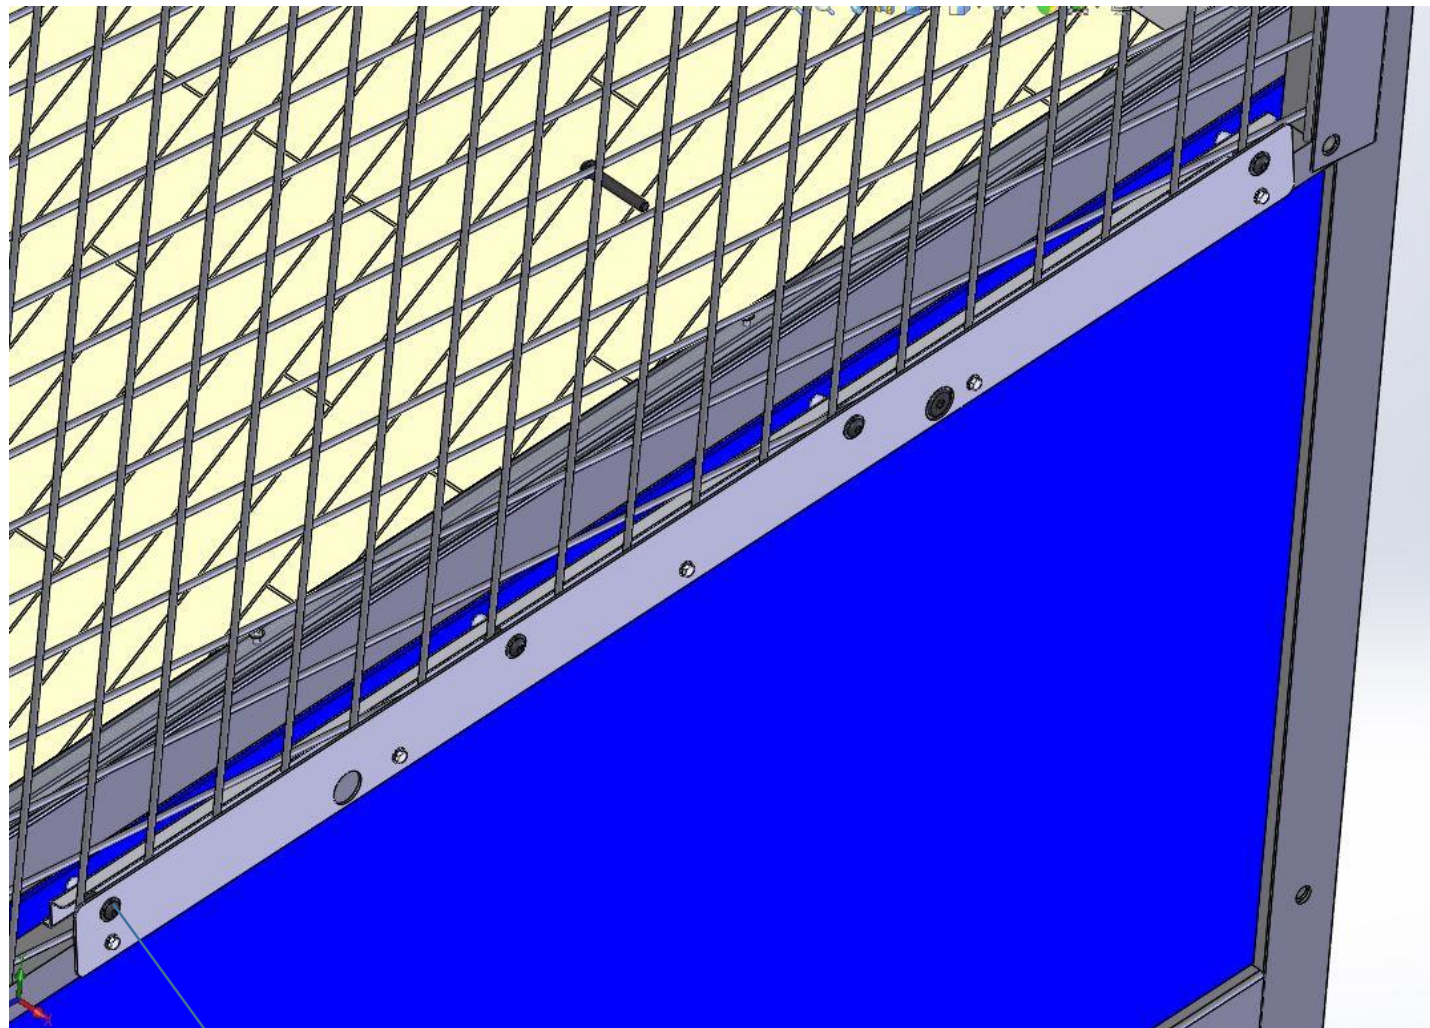

TIGHTEN ALL $\frac{1}{4}$ -20
BUTTON HEAD SCREWS.

STEP THREE

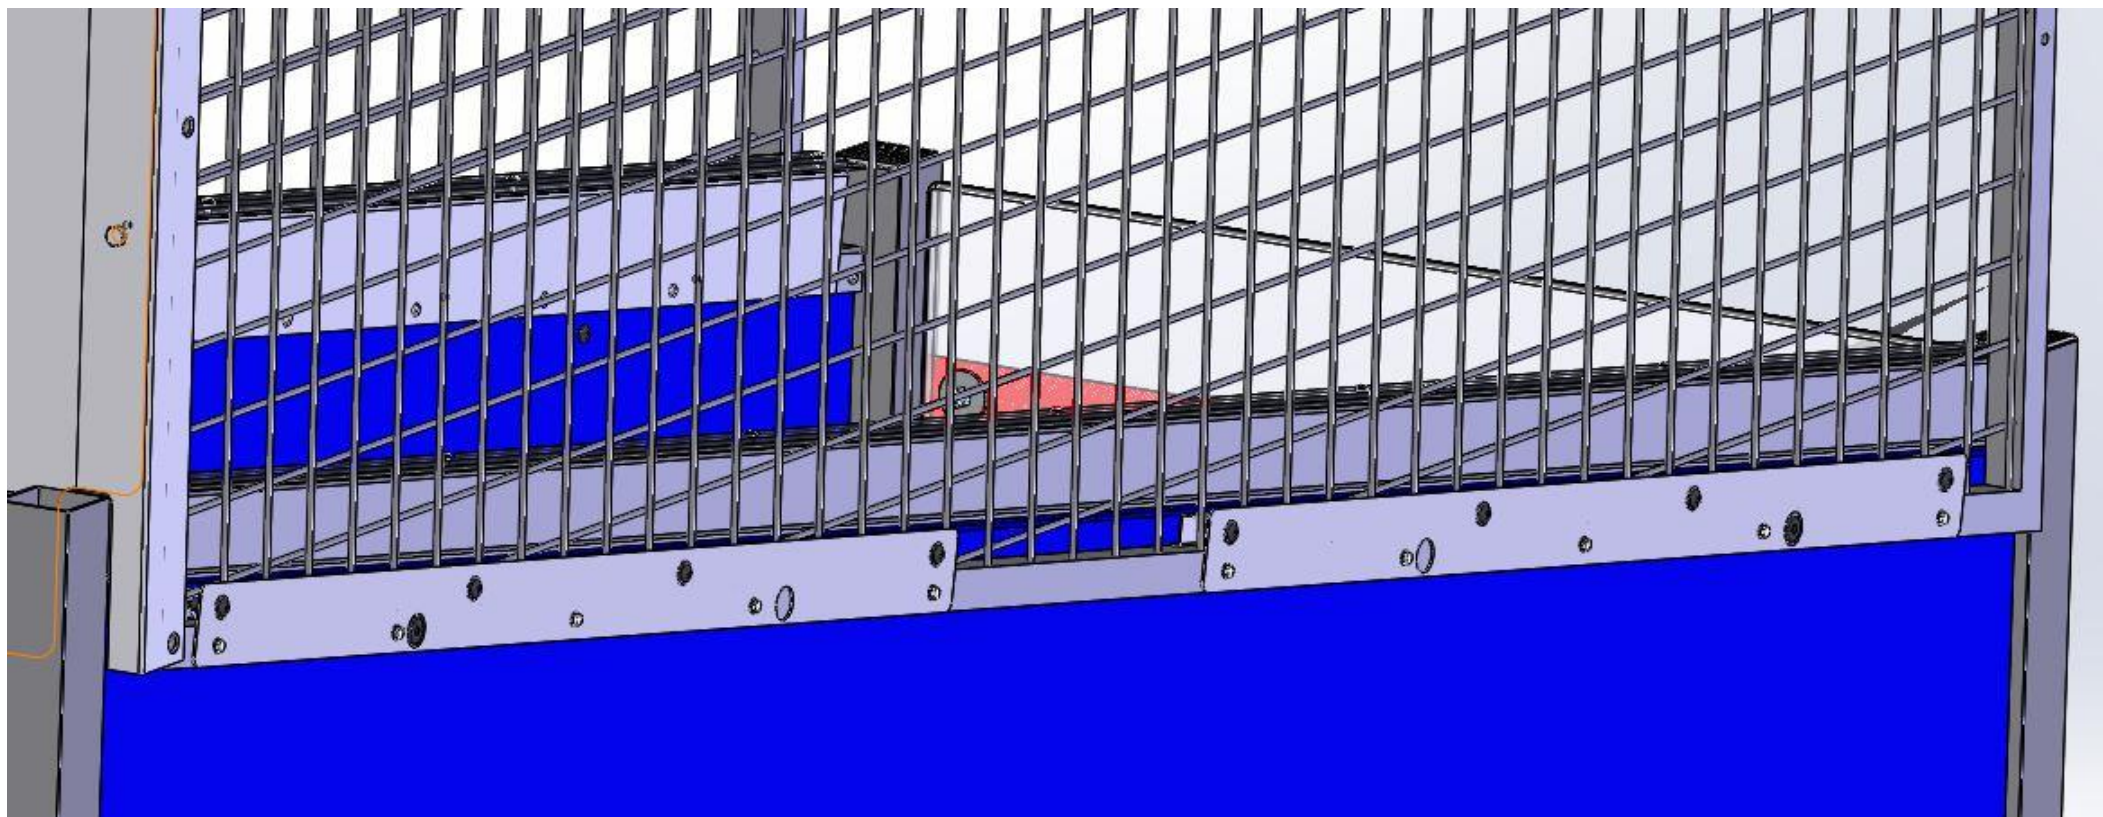

FULLY ASSEMBLED