

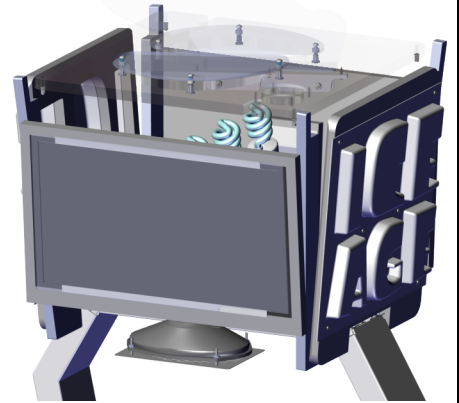




Step 1: Insert two wooden brackets as shown below.  
The outer plastic was removed for clarity.  
There is no left or right side.

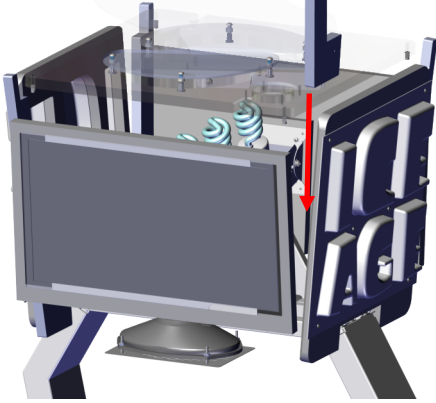

Step 2: Use one course drywall screw to attach the bracket to the side frame. Again, outer plastic is removed for clarity.

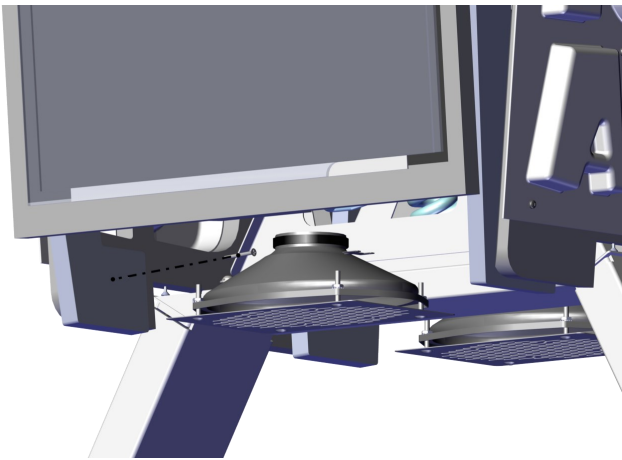

Step 3: Insert the square woodblock between the monitor and monitor mount. Use four 1" machine screws to attach the monitor and woodblock to the mounting bracket. Again, major parts were removed for clarity.

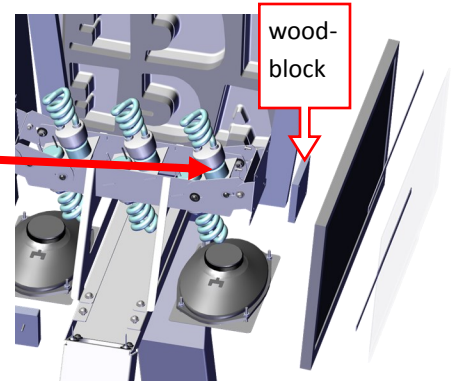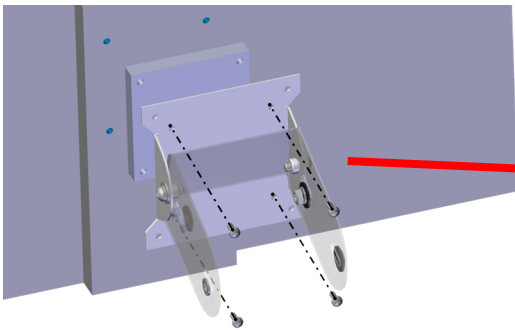

Final: Connect the AC to the monitor using the supplied AC harness adaptor. Connect the Video cable.