


Roll –N– Go Monopoly Quick Setup Guide....Questions? Call (716) 759-0360 ICE Service Department

Back Cabinet Hole Plug Installation

Step 1:

After removing the shipping bolts used to secure the back cabinet to the shipping pallet, insert four hole plugs into the holes the bolts were removed from. See below for location. The hole plugs are in the hardware kit.

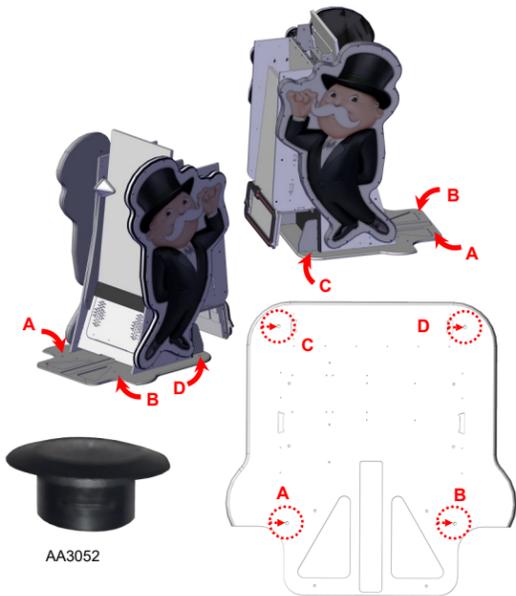

Hardware kit contains plugs located in right podium.

Cabinet ASSEMBLY

Step 2:

Before sliding the cabinets together, pull the main harness up and center it in the groove to ensure it does not get pinched between cabinets. Make sure to clear any large debris out of the triangular floor pockets. Then lift the podium edge onto the main cabinet floor, the wedge shapes guide the cabinet into position and stop it when the mounting holes are lined up. Secure with four AA6281s 1/4-20 x 1-1/2" and four AA6212 1/4" washers



Cabinet ASSEMBLY

Step 3:

Plug harnesses together and place wire cover on top.



Step 4:

Secure the wire covers using twelve AA6383 8-32 x 1 1/2.

Do not pinch the harnesses when securing.

Cabinet ASSEMBLY

Step 5:

Lift the hinged monitor up and lock into place using one AA6281 (1/4-20 x 1-1/2") Allen bolt on each side shown below.


- DO NOT LIFT BY THE MONITOR OR MARQUEE!
- USE A FRIEND TO LIFT!
- KEEP HANDS AND FINGERS AWAY FROM MONTY'S HAT AS YOU LIFT THE MONITOR UP!



Cabinet ASSEMBLY

Step 6:


Locate the two cityscapes panels. Insert three AA6510 (1/4-20 x 1 37/64) Allen head bolts into the holes shown below in both cityscape panels. Do not fully tighten, only install them two turns (See next step)

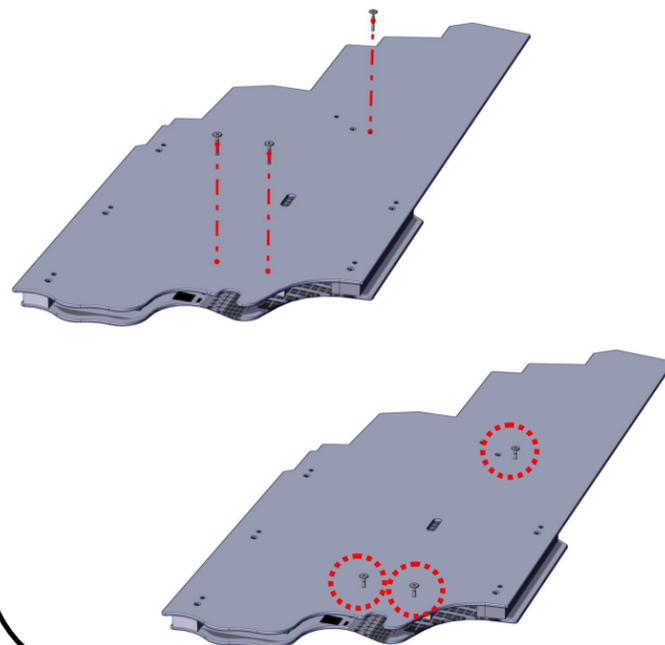

Cabinet ASSEMBLY

Step 7:

A large oval hole on the sides of the cabinet is where the wire harness should be inserted through. Then insert the bolts you installed into the holes and then slide the cityscape down to lock them in. Secure by tightening the bolts with a 5/32 bit included in the parts kit from the inside of the cabinet. Repeat for the other side.

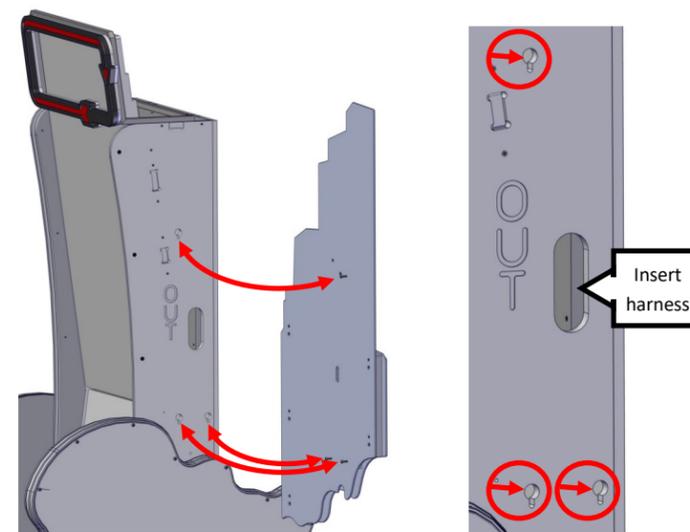

Cabinet ASSEMBLY

Step 8:

Connect the Cityscape harnesses. Only the right side cityscape will use both connections. The right side is not used.




Cabinet ASSEMBLY

Step 9:

Attach the white trim to the inside of each side of the cabinet.

Secure using AA6383 (8-32 x 1-1/2") bolts and AA6240 (#8) washers. 4 per each side.

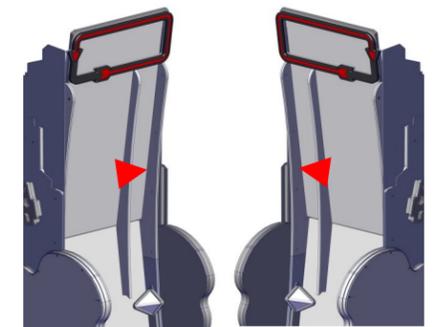

Step 10:

Remove the six security screws holding the plaque in place on the right-side. Attach the correct bonus decal and re-secure the plaque back to the cabinet. See next page to determine correct bonus decal.

