



**QUICK SET UP GUIDE - CABINET COMPLETE** It is highly recommended to review the manual and all the steps required to assemble your game. You will need a 7/16 socket, wrench, 1/4" socket driver, level, and Phillips screw driver. In the hardware package you will also find a 5/32 Security Bit. The hardware package and manual are located through the front of the game.

1) Marquee components are located at the back of the cabinet. Remove the components from the game and unwrap. Hardware is located in the hardware kit. Attach the top left and right supports using four AA6211 on both sides. On the right side is the harness, when attaching the right side support, make sure that the harness does not get pinched when securing. There is a slot cut into support to accommodate the wire harness.


The harness should point down toward the cabinet.

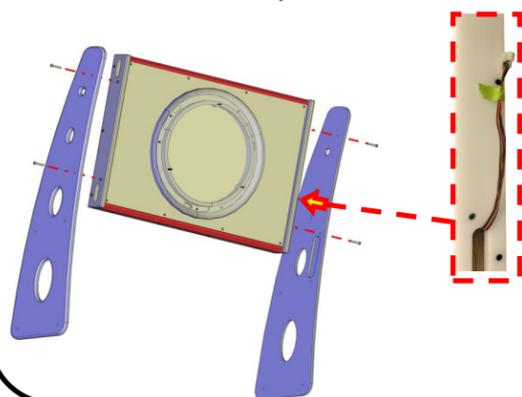


2) Open the back door. Lift the marquee assembly up onto the cabinet. Insert the marquee harness into the top hole at the left.

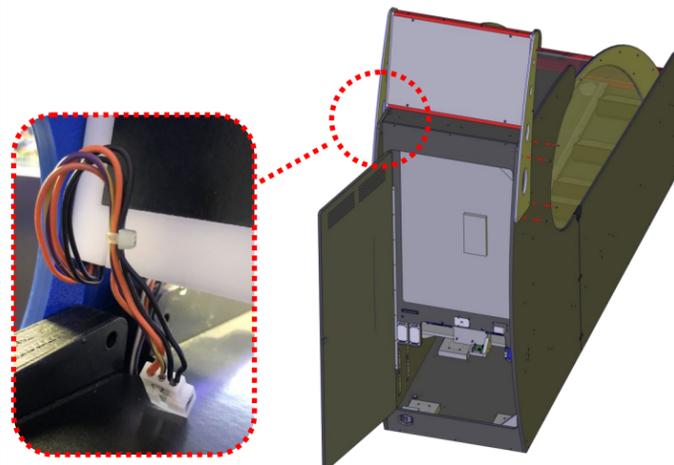

3) Carefully attach the marquee using four AA6211 Allen bolts at each side. The marquee is heavy for its size so a helper is recommended. The mating connector is located inside the cabinet shown in the diagram. Connect the harness.

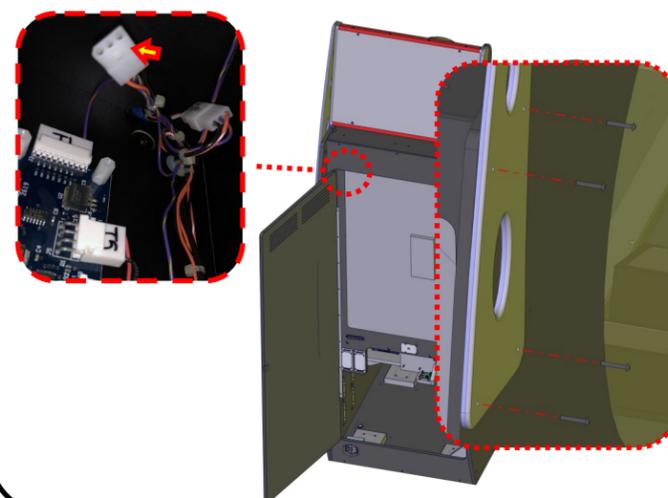

4) Install the upper wire covers onto the top sides of the cabinet using two AA6752 Allen bolts.

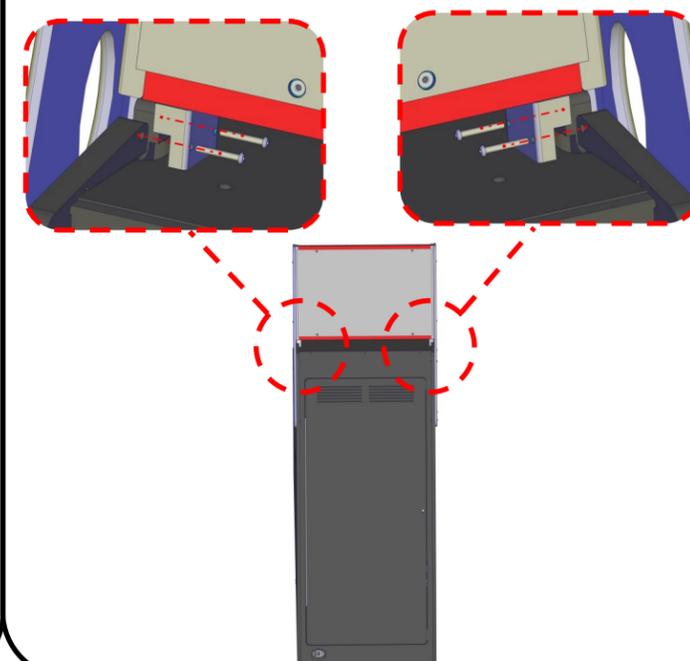

### Once your game is fully assembled!

Roll the game into place. Lower the feet at each corner of the cabinet making sure the cabinet is leveled.

(The use of a level is required for this).

### Set your options!

- Power on the game and wait till attract video.
- Press the "PROG" button.
- Use "SELECT" to move through options.
- Use "+" and "-" to change the values.
- Set the cost of play option. If using swipe, set to 1.
- Set the "Default Table" to match your cost of play.
- 1=.25, 2=.50, 3 = \$1.00, 4 = \$1.50, 5 = \$2.00, 6 = \$2.67

Any Questions? Call ICE Tech support.  
(716) 759-0360 Mon through Friday  
8:30 am - 6 pm Eastern Standard  
[WWW.ICEGAME.COM](http://WWW.ICEGAME.COM)

### What to do if errors are shown:

Error 5 might be experienced when first setting up the game. Other errors also might be displayed at this time but those are can be ignored until error 5 is corrected. Error 5 is the laser is not aligned.

**SEE PAGE 25 in the manual to resolve Error 5.**

If you are missing any of these items please contact ICE Service Department at (716) 759-0360.