



First start by removing all of the dome bolts around the edge of the top and open the dome:

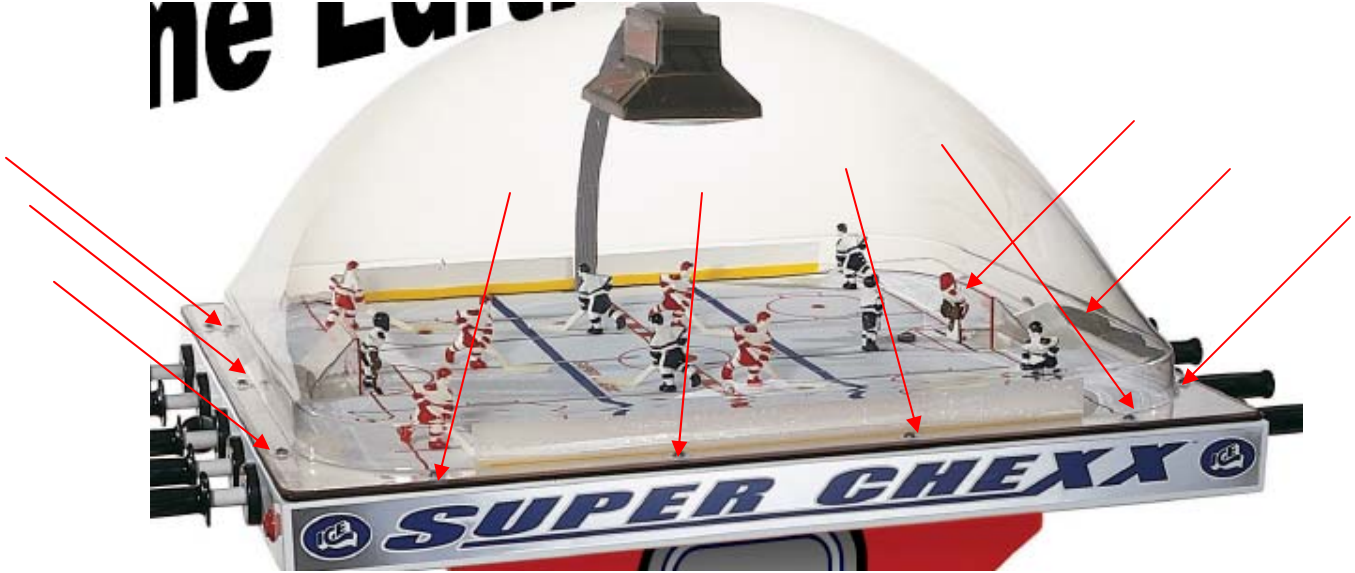

Remove the players from the game, you will have to grasp hard with one hand and use your other hand around the base of the player (holding surface down) and pull straight up.

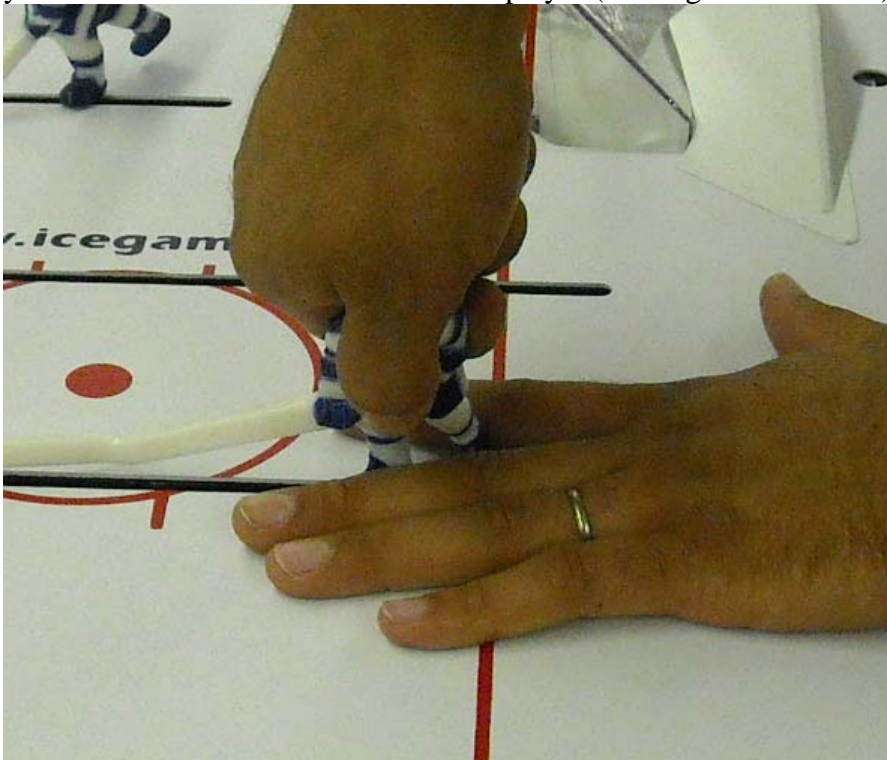


To remove the goalie you will have to remove the cotter pin between his legs, start by squeezing the ends until they are straight, and then push the pin forward (toward center ice) and then remove. Then you will be able to lift the goalie straight up off of the block.




Remove the ice surface and set aside.


You will then see the puck eject mechanism in the center of the unit. Remove the screws holding the assembly down.

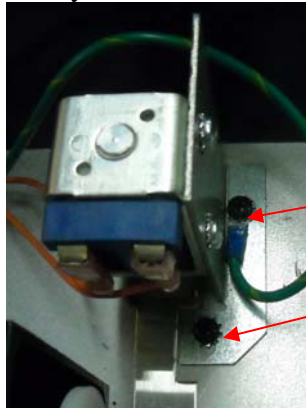


Remove the first screw (closest to eject solenoid) holding the puck ramp bracket down.

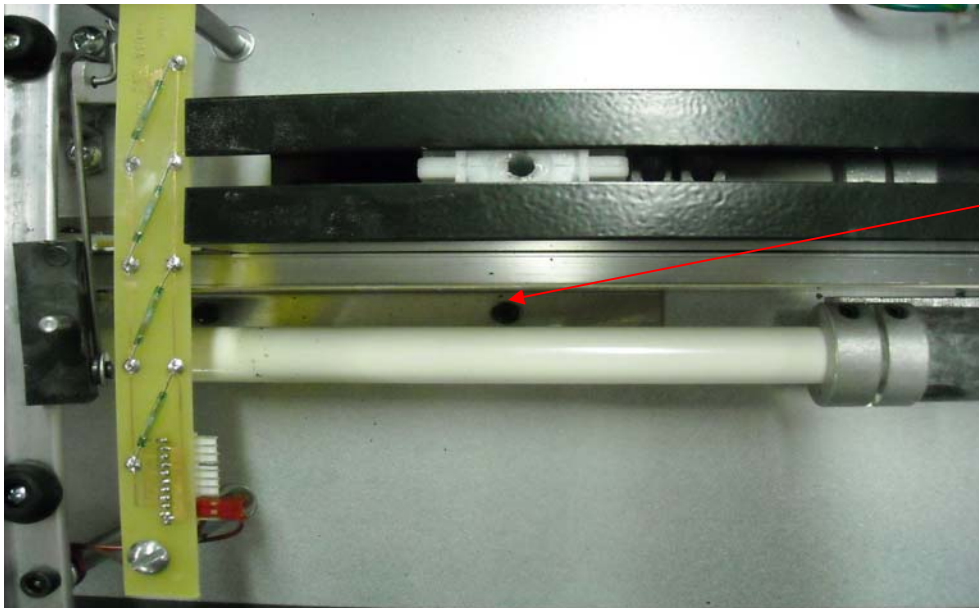

Repeat on the other side.

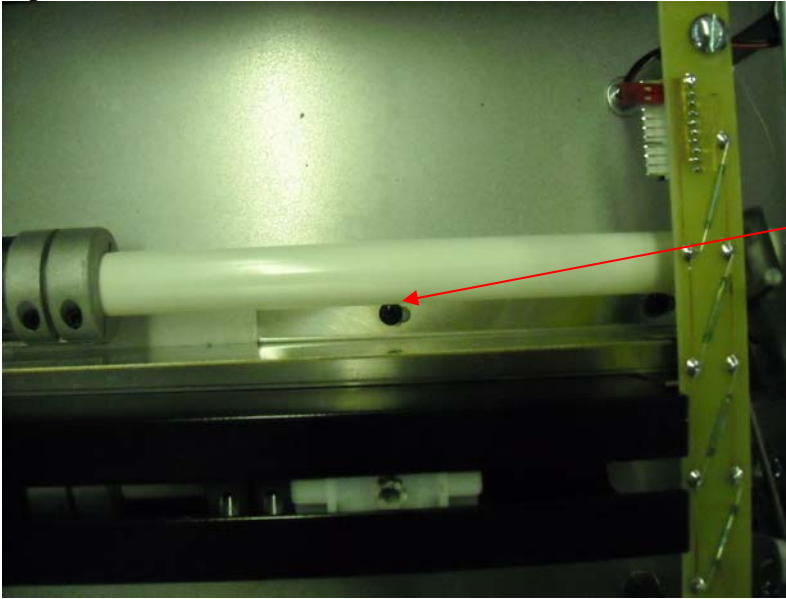

Gently lift the bracket up using a flat blade screw driver, ensure that you only lift the puck guide (red arrow) and not the puck ramp (blue arrow). Slide the puck eject assembly away from the chute. You will have to angle the solenoid assembly as you are removing it to allow it to clear the hole in the guard.

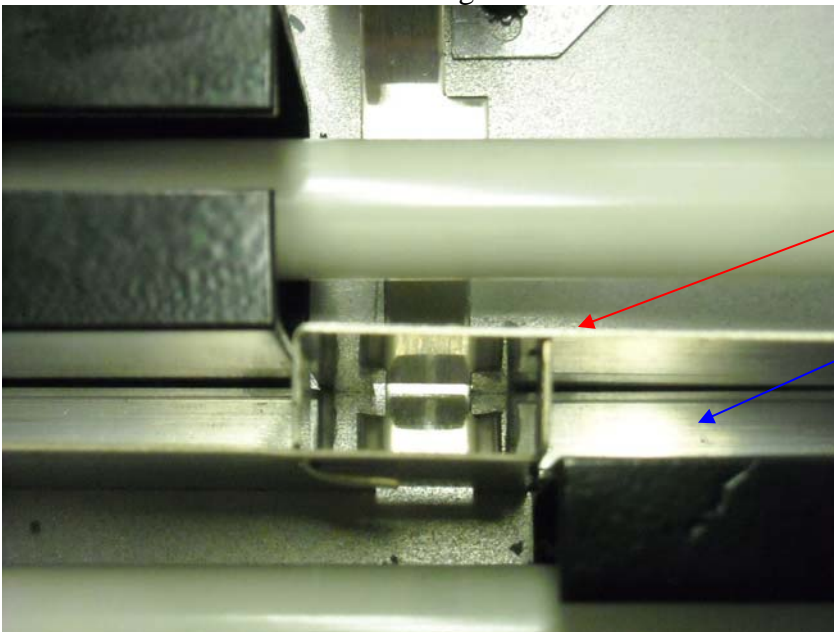

Replace the solenoid assembly using the same procedure.

After installing the new assembly, loosely mount the solenoid to the base. You will be able to slide it back and forth. Ensure that the eject arm edges do not bind on the edge of the ramp. Tighten the screws down after the solenoid is in the proper position, and re-assemble the game.