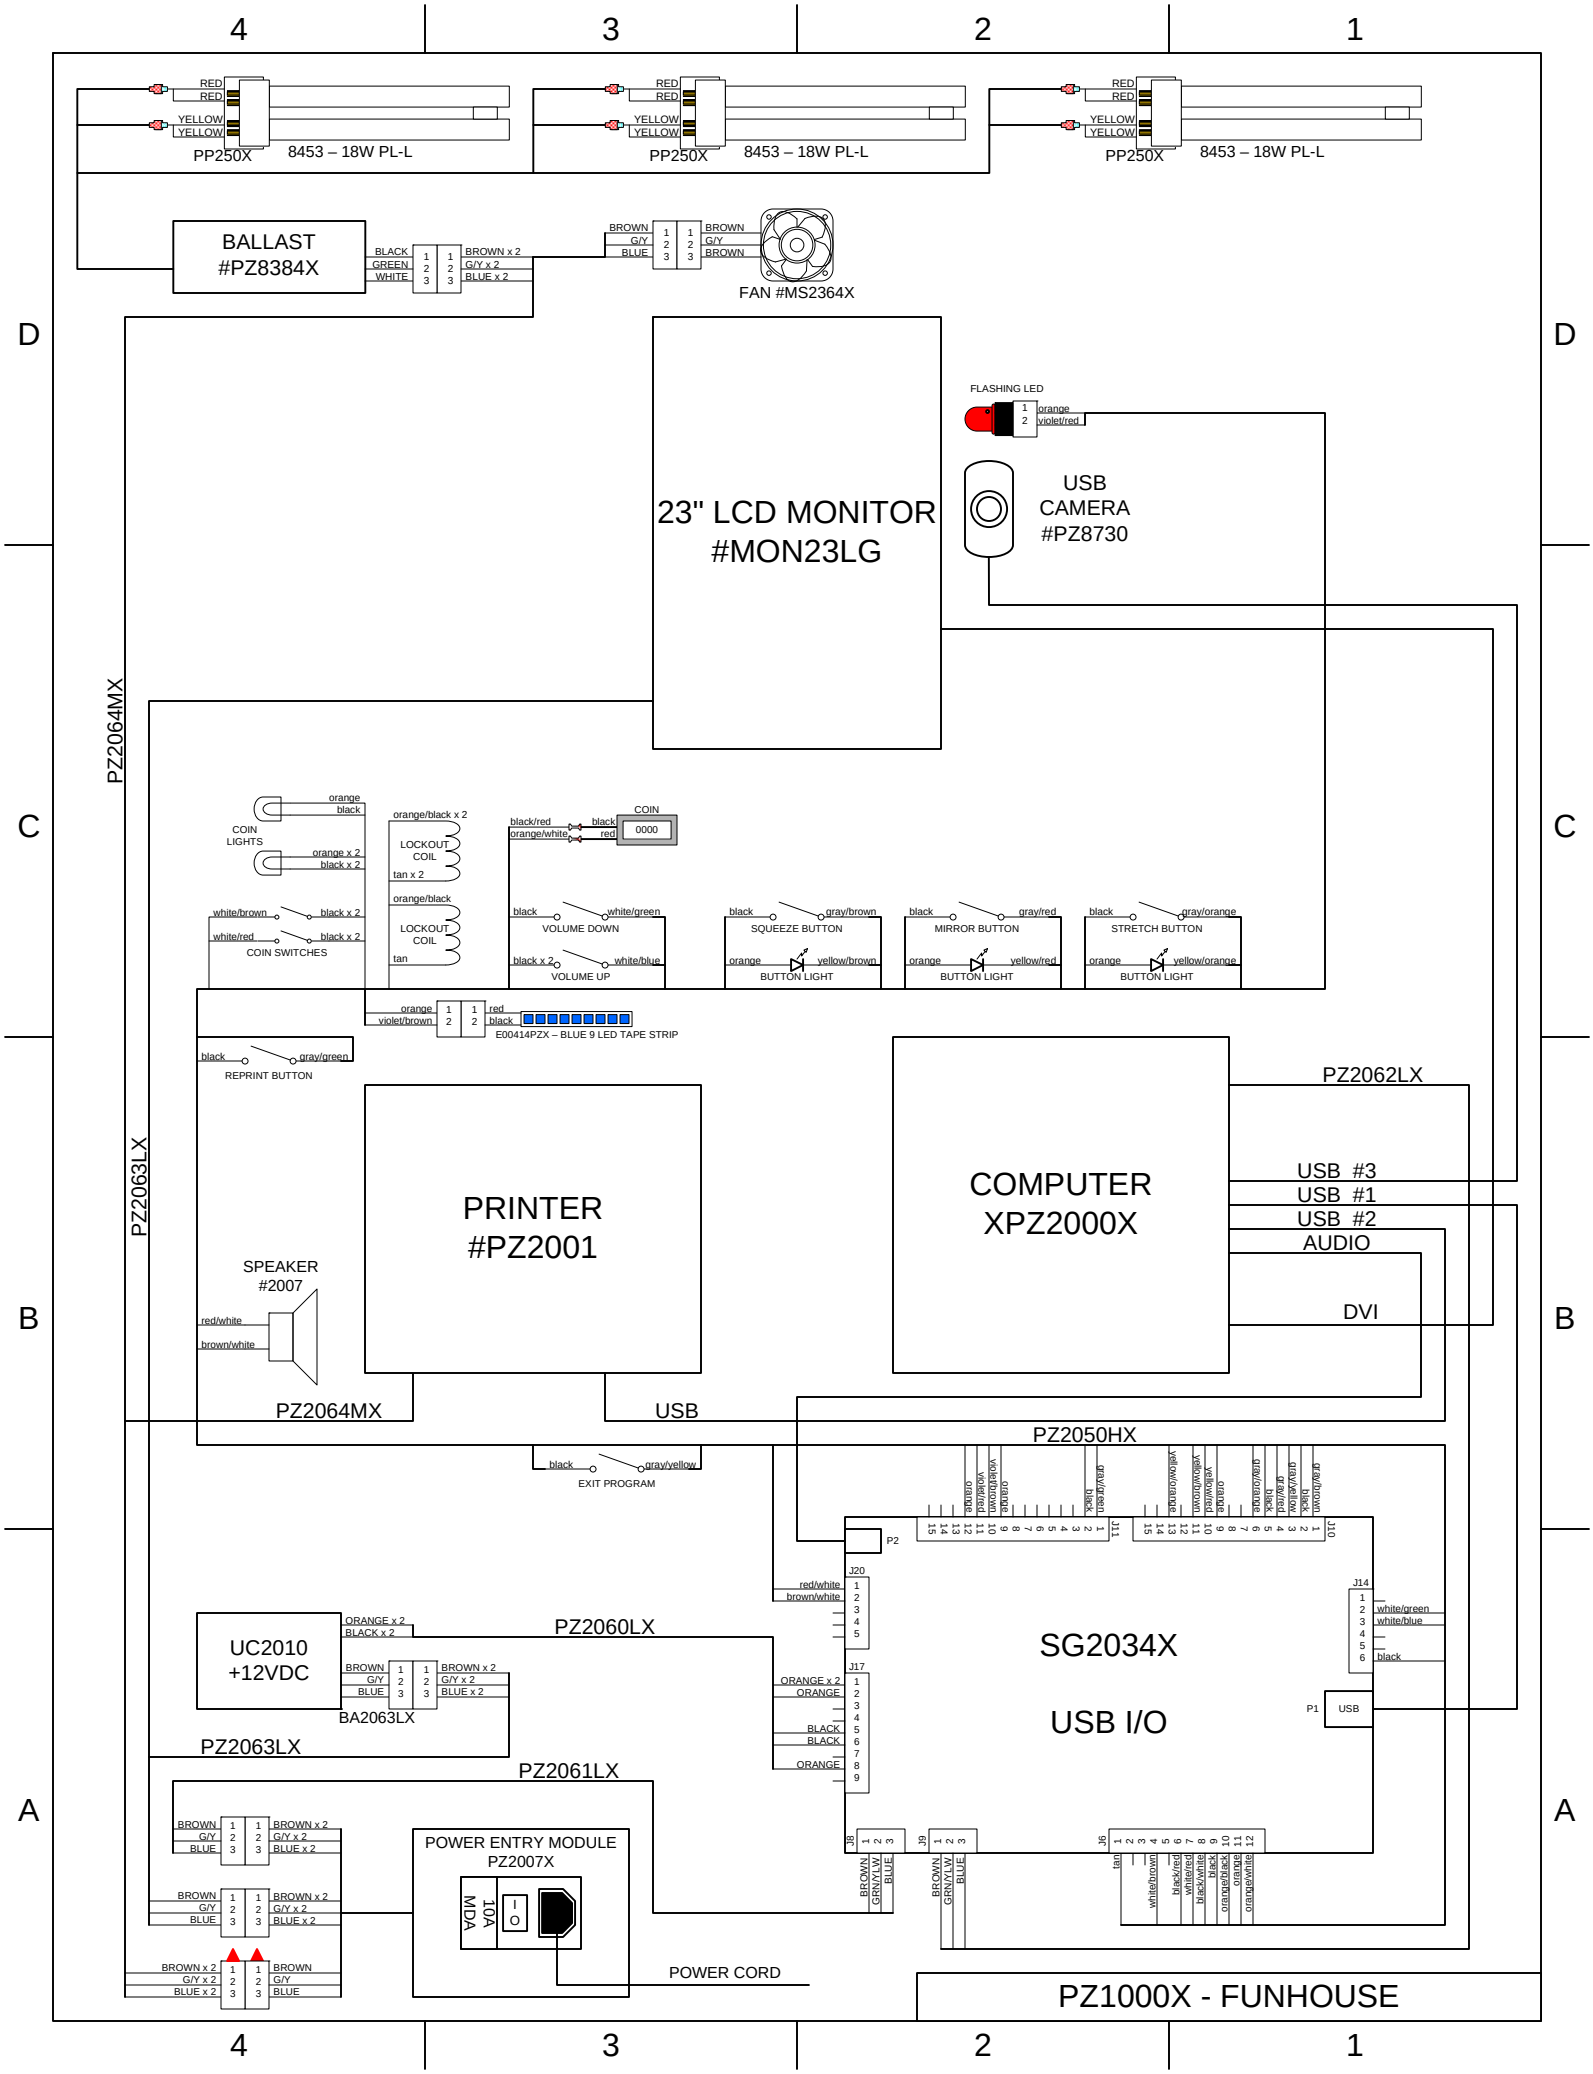
PP250X
8453 – 18W PL-L
RED
RED
YELLOW
YELLOW
BALLAST
#PZ8384X
BLACK
GREEN
WHITE
BROWN x 2
G/Y x 2
BLUE x 2
BROWN
G/Y
BLUE
FAN #MS2364X
23" LCD MONITOR
#MON23LG
FLASHING LED
orange
violet/red
USB
CAMERA
#PZ8730
PZ2064MX
PZ2063LX
COIN
LIGHTS
orange
black
orange x 2
black x 2
orange/black x 2
LOCKOUT
COIL
tan x 2
orange/black
tan
COIN SWITCHES
white/brown
white/red
black/red
orange/white
COIN
0000
VOLUME DOWN
VOLUME UP
SQUEEZE BUTTON
MIRROR BUTTON
STRETCH BUTTON
BUTTON LIGHT
gray/brown
gray/red
gray/orange
yellow/brown
yellow/red
yellow/orange
violet/brown
E00414PZX – BLUE 9 LED TAPE STRIP
REPRINT BUTTON
gray/green
PRINTER
#PZ2001
COMPUTER
XPZ2000X
PZ2062LX
USB #3
USB #1
USB #2
AUDIO
DVI
SPEAKER
#2007
red/white
brown/white
PZ2064MX
USB
PZ2050HX
EXIT PROGRAM
gray/yellow
SG2034X
USB I/O
UC2010
+12VDC
ORANGE x 2
BLACK x 2
PZ2060LX
BA2063LX
PZ2063LX
PZ2061LX
POWER ENTRY MODULE
PZ2007X
10A
MDA
POWER CORD
PZ1000X - FUNHOUSE